### USER MANUAL





Product Name: \_ Lewis LH4(Axial Cylinder)


Product Type: Hydraulic Brake



- Remove the brake oil port screw and use an M5 connector for bleeding. Warning! Removing the oil reservoir cover may result in leakage.
- When bleeding is required, please set the bite point to the maximum and pump the brake lever several times to fill the oil circuit.

- During handlebar installation ensure the threads are correctly aligned to avoid any thread stripping.
- Fine tune lever reach by hand turning the dial and use a 2mm Allen key to adjust the bite point of the brake pads.



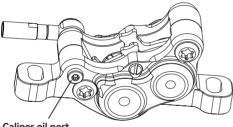

Caliper oil port

- When adjusting the brake lever travel and bite point, please make sure you are happy with the feel of the brake before attempting difficult riding.
- Our brakes are designed to be used with MINERAL OIL.
- During installation, we suggest resetting the caliper piston (clean any dirt if necessary) to effectively avoid disc rubbing.
- Before installation, please remove holding pads from the caliper, insert the included brake pads, and ensure the fixing screws and retaining clips are in place. DO NOT over tighten the brake pad holding screw.
- Our brakes come with a 3 years warranty. If you have any questions or uncertainties, please feel free to contact us.

to thank you for your support of and trust in LEWIS. Now get out there and ride! to access technical information or news on new and exciting products. Lastly, we would like service for everyone. You can follow our various contact methods and multimedia accou email or through after-sales feedback to create an unbeatable buying, riding, and after-sales LEWIS is dedicated to designing and producing components that consistently remain at the forefront of the cycling industry. Through user data combined with our research and test results, we continuously optimize our products to best serve our customers. We sincerely invite users to report any issues they encounter during the use of our products, either via .

## Safety Information

- procedures stated in the User's Manual Please read and review all information carefully before use and always follow the
- Use caution when using a larger disc brake rotor as it provides a higher braking force
- come in contact with the rotating rotor The disc brake rotor is sharp enough to inflict severe injury to your fingers if they
- grease The brake may not work properly if the brake pads or rotor is contaminated with oil or
- Stop using the brake if the disc brake rotor becomes worn down to it's thickness limit
- If oil leaks occur, immediately stop using the brakes and consult your closest Lewis dealer.
- The wheel may lock if the front brake is applied too strongly, use caution
- Braking distance may be longer in humid or wet weather
- can cause serious injury or even death This brake is designed for downhill or free riding, with higher braking force compared to other brakes. If not familiar with this brake, accidents may occur that

-3-

- . Inhalation of vapors or mineral oil mist may cause nausea contact with If mineral oil comes into contact with eyes and skin, it may result in irritation. If in eyes, rinse with water and receive immediate medical assistance
- . As the brake pads wear out use the bite point adjuster to account for this. Please also note more oil may need to be added to the reservoir.
- DO NOT modify this product, doing so will void the warranty
- . Please keep the User's Manual for future reference

# Safety Information

Check the following before riding the bicycle

- Is the brake leaking oil?

Is the disc brake rotor cracked or deformed?

- Does each brake pad have a thickness of 0.5 mm or more?

If you notice any potential problem, please contact the place of purchase or a bicycle dealer

Language:English

.

Is the brake Is the brake lever secure? Are there any abnormal noises:


lever action smooth and solid?

- Do the front and rear brakes work correctly?

LEWIS

**TECHNICAL MANUAL** 

### LH4 Brake Lever Diagram

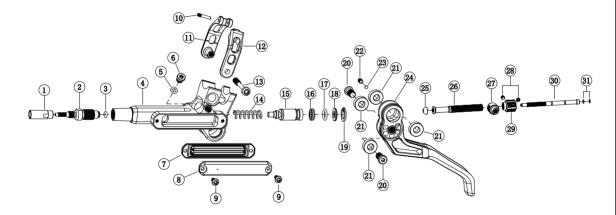

| Serial No. | Component Name      | Quantity | Serial No. | Component Name            | Quantity |
|------------|---------------------|----------|------------|---------------------------|----------|
| 1          | Oil hose connector  | 1        | 17         | O-RING                    | 1        |
| 2          | Oil hose connector  | 1        | 18         | Retainer washer           | 1        |
| 3          | O-RING              | 1        | 19         | Circlip                   | 1        |
| 4          | Bracket             | 1        | 20         | Screw                     | 2        |
| 5          | O-RING              | 1        | 21         | Bearing                   | 1        |
| 6          | Oil plug screw      | 1        | 22         | Set screw                 | 1        |
| 7          | Diaphragm           | 1        | 23         | Gasket                    | 1        |
| 8          | Oil Reservoir cover | 1        | 24         | Lever blade               | 1        |
| 9          | Screw               | 2        | 25         | Ball head cap             | 1        |
| 10         | Pin                 | 1        | 26         | Piston rod                | 1        |
| 11         | Clamp lower cover   | 1        | 27         | Piston rod rotating joint | 1        |
| 12         | Clamp upper cover   | 1        | 28         | Set screw                 | 2        |
| 13         | Clamp screw         | 1        | 29         | Adjustment Knob           | 1        |
| 14         | Piston spring       | 1        | 30         | Piston rod inner shaft    | 1        |
| 15         | Piston              | 1        | 31         | O-RING                    | 2        |
| 16         | Piston seal         | 1        |            |                           |          |


-5-

- It is not recommended for individual users to fully disassemble the brake lever. If necessary, please familiarize yourself with the components in the diagram, and use official disassembly videos as a reference.
- When disassembling and maintaining the brake, please use professional tools and cleaning agents. After cleaning, rinse thoroughly with running water to remove residual cleaning agents, and assemble after thorough drying.

#### **TECHNICAL MANUAL**

#### LEWIS

| Serial No. | Component Name      | Quantity |
|------------|---------------------|----------|
| 1          | Calipers lock screw | 2        |
| 2          | Pad Pin             | 1        |
| 3          | Lower shell         | 1        |
| 4          | Piston seal (17mm)  | 2        |
| 5          | Piston seal (14mm)  | 2        |
| 6          | Piston (14mm)       | 2        |
| 7          | Piston (17mm)       | 2        |
| 8          | Upper shell         | 1        |
| 9          | Pad Pin Clip        | 1        |
| 10         | Oil plug screw      | 1        |
| 11         | O-RING              | 2        |
| 12         | Oil hose connector  | 1        |
| 13         | Oil hose connector  | 1        |
| 14         | O-RING              | 1        |
| 15         | O-RING              | 1        |
| 16         | Oil plug screw      | 1        |

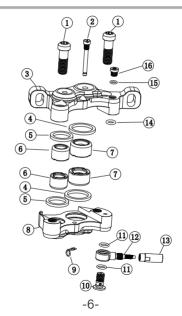

### LH4 Caliper Diagram

- It is not recommended for individual users to fully disassemble the caliper. If necessary, please familiarize yourself with the components in the diagram, and use official disassembly videos as a reference. When assembling, remove any old sealing adhesive residue and use new cylinder seal grease for installation.
- When disassembling and maintaining the brake, please use professional tools and cleaning agents. After cleaning, rinse thoroughly with running water to remove residual cleaning agents, and assemble after thorough drying.



#### ALL FOR CYCLING EXPERIENCE

**POWERED BY:** 



Website: www.lewisbike.com